

GRiddy FV BLOW OFF VALVE ADAPTER KIT

BFV-311 CT9A

取扱説明書

ご使用前に必ずお読みください。
この製品は、競技専用部品です。

適合

車名	車種	車両型式	エンジン型式	年式
ミツビシ	ランサー エボリューション-VII	CT9A	4G63	01. 2~02. 12
	ランサー エボリューション-VIII	CT9A	4G63	03. 1~05. 2
	ランサー エボリューション-IX	CT9A	4G63 MIVEC	05. 3~07. 9
	ランサー エボリューション ワゴン	CT9W	4G63(MIVEC)	05. 9~07. 6

* 日本国内仕様車

仕様 : リターン配管装着専用。

※ リターン配管に必要な部品は全て付属しています。



注意

この製品は上記の適合車種専用設計、開発されたものです。
上記以外の車種には、絶対に使用しないで下さい。

2013年6月初版

安全上の注意

重要

- 本書は、製品を車両に装着する際と使用する際の注意事項が詳しく説明してあります。必ずよくお読みになって、正しくお使い下さい。
- 本書は、ノーマル車両を基準に作成しています。
- 本書は、製品をご使用中は大切に保管して下さい。
- 本書では、下記に示す表記を用いています。



注意

この表示を無視して誤った取扱いをされると、人が重傷を負う可能性が想定される内容、及び物的傷害のみの発生が想定される内容を示しています。



警告

この表示を無視して誤った取扱いをされると、生命への危機又は、重傷を負う可能性が想定される内容を示しています。

- ◆ 追加インジェクターを使用する場合は、必ずブローオフバルブ取付位置より後(ブローオフバルブとスロットルの間)に、取り付けて下さい。



注意

本製品の誤使用、及び分解は絶対に行なわないで下さい。
誤使用、及び分解したことにより、本来の性能を損なうだけでなく、ブローオフバルブが壊れ、最悪の場合エンジンが壊れる恐れがあります。

重要

1. この製品は、競技専用部品です。
 - 一般公道を走行する場合は規制を受ける場合があります事前に各都道府県の陸運事務所の車両課に確認してください。
2. 製品の装着は、必ず専門ショップで行なって下さい。
 - 製品の装着は、専門知識と加工技術、及び特殊工具が必要です。
3. 製品装着の前に車両の点検整備を必ず行なって下さい。
 - 定期点検整備要領に従って点検、整備を行ない、不具合箇所は事前に修理、調整してください。
4. この製品を指定された用途以外には使用しないでください。
 - 改造や誤った取扱いをされたことで生じた破損や故障は保証の対象になりません。

重要

1. バッテリーマイナス端子を切り離れた後に作業を行なって下さい。
2. エンジンルーム内の温度が充分に下がってから作業して下さい。
3. 取り外し・分解に関する注意

純正部品の取り外し作業は、メーカーの発行する整備要領書を参照し、作業を行なって下さい。

- 再使用する部品を洗浄、点検して異常が認められた場合は新品に交換して下さい。
4. 取り付け・組み付けに関する注意
 - 各部品に異物の混入がないよう清掃、確認の上、取り付けて下さい。
 - パッキン・ガスケット類などは、必ず新品を使用して下さい。
 - ボルト、ナットは規定のものを用い、トルク表示箇所は規定トルクで締め付けて下さい。

ジャッキアップ及びリフトアップに関する注意



警告

- ・ 車両の前部、または後部だけジャッキアップする場合には必ず輪止めをし、必ず指定箇所をリジトラック(ホイールスタンド)で支えて安全な作業を行なって下さい。
- ・ 車両をリフトアップする場合は、必ず指定箇所にリフトの受台をセットしてリフトアップして下さい。また、リフトアップ後は必ず安全装置を掛けて下さい。

重要



注意

定期点検は、自動車の安全性をはかる上で必要不可欠です。
日常の点検はもとより「運行前点検」や「定期点検」は必ず実施して下さい。



注意

エンジン始動の際には、車体下面や排気口付近に燃えやすい物が無い事を確認して下さい。



警告

エンジン始動時は、換気に充分注意して下さい。
換気が悪いところではガス中毒の危険があります。


品質には万全を期しておりますが、注意事項を怠った為に発生した不具合・事故・破損等について
当社は一切責任を負いません。

株式会社 トラスト

パーツリスト

- | | | | |
|-------------|----|---------------|----|
| 1. ブローオフバルブ | ×1 | 3. ブローオフガスケット | ×1 |
| 2. アダプター | ×1 | 4. ボルト・ワッシャー | ×2 |
| | ×1 | | |


パーツリスト構成図

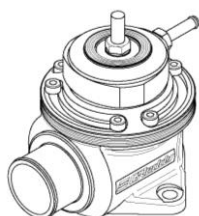


1



2

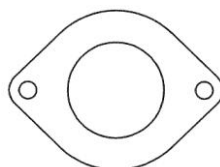

3

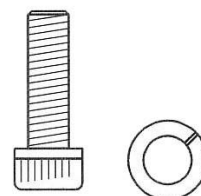


4

取り付け方法

- (1) 純正エアバイパスバルブの6φ バキュームホース、34φ ホースを外して、タービンインテークホースから純正エアバイパスバルブを取り外して下さい。



- (2) グレディ・ブローオフバルブ〈No.1〉をKITボルト〈No.4〉、ブローオフガスケット〈No.3〉を使用してKITアダプター〈No.2〉に取り付けて下さい。

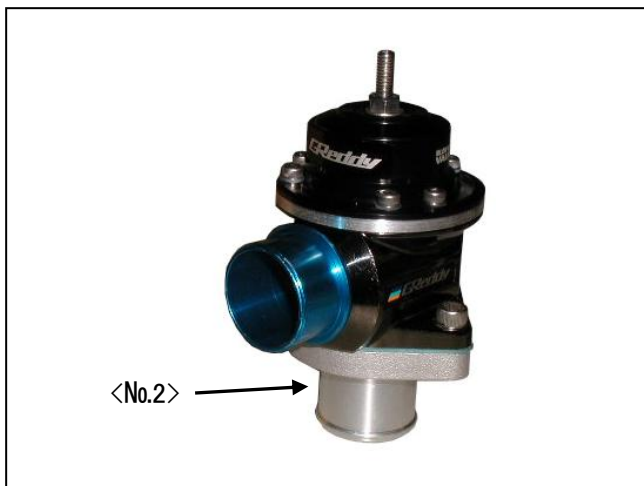

- (3) ブローオフバルブAssyを車両に取り付け、トップカバーの6φ ユニオンに純正6φ バキュームホースを配管して下さい。



エンジン始動チェック

- (1) パーツが正確に取り付けられているか点検し、バッテリー(－)端子を接続してエンジンを始動して下さい。
- (2) エンジンの不具合、ボディー干渉、各接続部分のエア漏れ、異音等が無いか確認してください。
- (3) 軽く2、3度空吹きを行ない、ブローオフバルブが作動するか確認してください。

装着後の調整

アイドルリング不調やエンジンストール等の不調が生じた場合、トップカバーアジャストスクリューのM6ロックナットをゆるめてアジャストスクリューを少しずつHARD側に締め込んで下さい。

調整後は必ずロックナットを締めてアジャストスクリューを固定して下さい。

※ アジャストスクリューは商品出荷時に最も左方向へ回した状態でセットされていますので、それ以上左方向には回さないで下さい。

※ アジャストスクリューを締め込んでいくとバルブのストローク量が少なくなり、締め込み過ぎるとブローオフバルブの性能が損なわれてしまいますので注意してください。

大気開放で装着した場合、車種により走行時スロットルオフした場合にエアフロメーター出力電圧が乱れ、エンジンストールしやすくなる場合があります。

アジャストスクリューで調整してもストールする場合は、e-manage等を取り付け、ECU側でエンジンストール補正をするか、または、リターン配管装着にして下さい。



警告

走行中にエンジンストールを起こすと、ステアリングやブレーキの操作に支障をきたし、重大事故の原因となる恐れがあります。

アタッチメントの交換方法

グレッディ・ブローオフバルブは開放ファンネルとホースアタッチメントの交換が可能です。


アタッチメントの取り外しは左回し、取り付けは右回しのねじ込み式になっています。

アタッチメントを交換する際はリングを付け替え、アタッチメントのフランジ部がブローオフバルブボディに当たるまで手でねじ込んで下さい。

※ オリングはシリコングリス等を塗布してから、アタッチメントネジ部のオリング溝に装着して下さい。

※ オリングが緩み止めの役目をしますので、強く締めこむ必要はありません。

締め過ぎには注意して下さい。

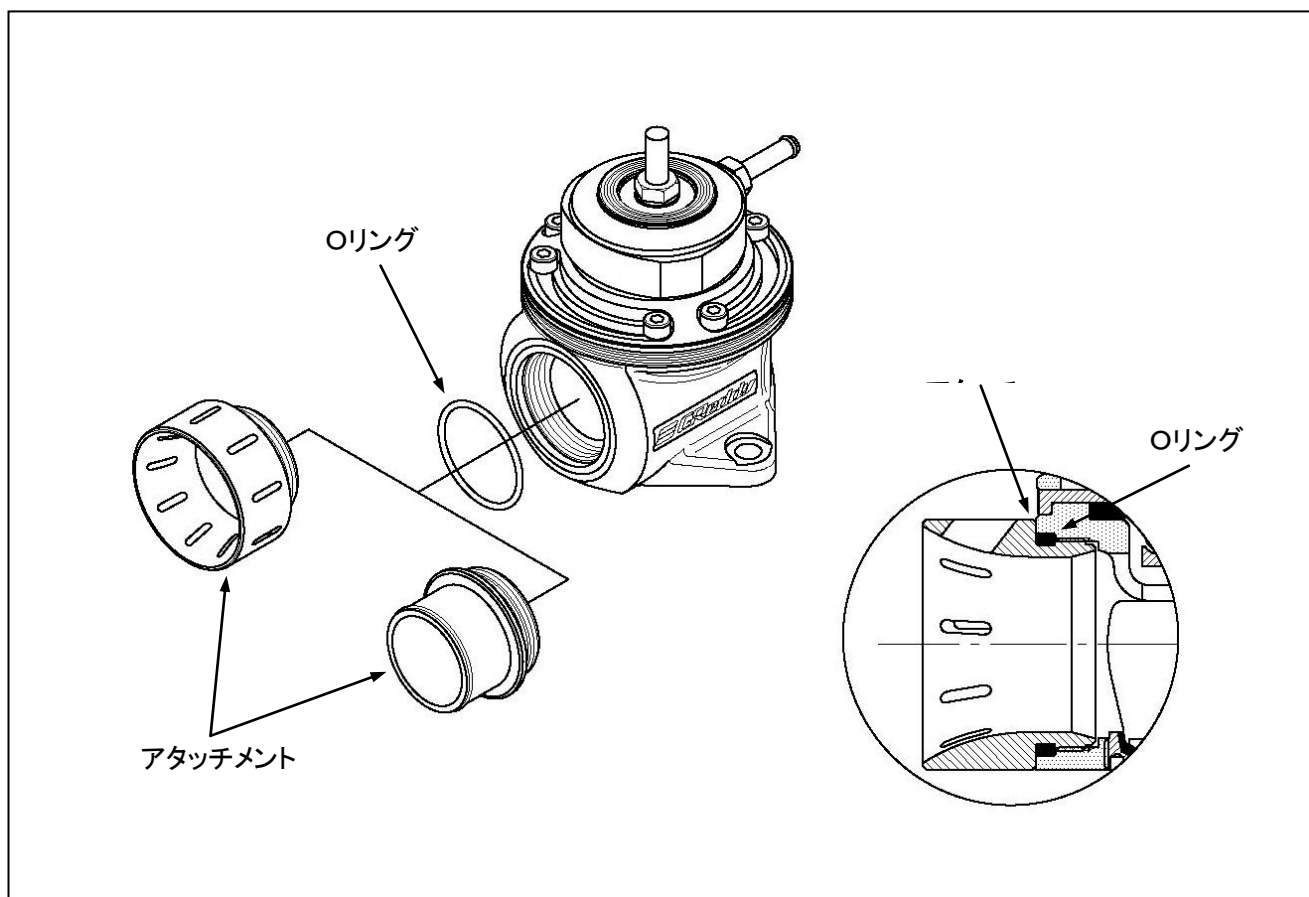

GREDDY **FV** **BLOW OFF VALVE** **ADAPTER KIT**

BFV-311 CT9A

Instruction Manual

Please read the manual carefully before installing and using this product.
This product is for off road use only.

MAKE	MODEL	CHASSIS	ENGINE	YEAR
mitsubishi	LANCER EVOLUTION-VIII	CT9A	4G63	2003 -

*USDM

APPLICATION : Recirculation Type

※ Parts necessary for recirculation are included.



Important

This kit is designed for the vehicle specified above.

Please do not attempt to install this kit on other application.

SAFETY INFORMATION

Important

- This Manual will explain the proper installation procedure of this product.
Please read this manual carefully.
- This manual was created considering the vehicle to be completely factory spec.
- While using this product, please keep this manual to use as a reference.
- The notation shown below is used through out this manual.



Caution

This notation will indicate the important procedures and instructions to prevent accidents and injury.



Warning

This notation will indicate the important procedures and instructions to prevent life treating accidents and injury.

- ◆ If sub injectors are used make sure to mount he injectors after the blow off valve between the blow off valve and the throttle body.
- ◆ On some applications, there are possibilities of engine stall if the air is released out to the atmosphere.

It is recommended to re-circulate the sir back in to intake system before the turbo in-let



Caution

DO NOT disassemble or mishandle this product.
This will cause the product failure and may damage the engine.

Important

1. This product is for off road use only.

- This product is legal for sale or use in CA only on vehicles, which may never be driven on a public highway. Check your state and local laws regarding the use of any performance products.

2. Installation of this product should be performed by an experienced mechanic.

- Special tools and modification skills are necessary for the installation of this product.

3. Inspect the vehicle before the installation of this product.

- Inspect the vehicle and make sure that there are no problems with the vehicle before installation.

4. Do not use this product for purpose other what is intended for.

- Damage due to modifications or misuse of this product will void any warranty.

Important

1. Disconnect the negative terminal of the battery before installation
2. Make sure the engine room has cooled down before installation.
3. Removal and disassemble caution

Please follow the basic manufacturer's recommended procedure.

- Make sure to clean the parts that are reused and replace any parts that are damaged.
4. Installation and reassembly caution
 - Clean the parts thoroughly before installing the parts.
 - Make sure to replace gaskets with new part.
 - Please refer to the torque spec chart for the proper torque specs for the bolts and nuts.

Jacking and lifting precautions



Caution

- When Jacking up the front or rear of the vehicle, please make sure to lift the vehicle up at the proper jack points and use safety stands and Wheel chocks.
- When Lifting the vehicle, ensure that the front and rear of the vehicle are well balanced at the proper lift points.

Important



Caution Make sure to check the installation before operating the vehicle.



Caution Before starting the engine, make sure that there are no flammable items around the exhaust system and in the engine room.



Warning Start the engine in a well-ventilated area.


Although we have taken all the possible measures to provide the highest quality products, we will not be responsible for any damage, or accidents caused by improper use, incorrect installation.

GReddy Performance Products, Inc.

PARTS LIST

- | | | | |
|--------------------|-----|----------------|-----|
| 1. BLOW OFF VALVE | × 1 | 4. EMBLEM | × 1 |
| 2. ADAPTER | × 1 | 5. BOLT·WASHER | × 2 |
| 3. BLOW OFF GASKET | × 1 | | |


PARTS LIST

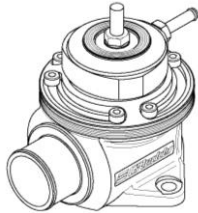


1



2

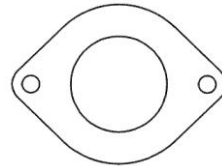

3

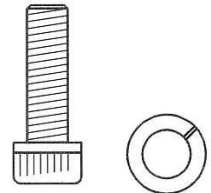

4

Installation

- (1) Disconnect the 6φ vacuum hose and 34φ hose and remove the air bypass valve off from the suction hose.



- (2) Install the Blow off valve <No.1> to the adapter using the provided bolts <No.5> and gasket<No.3> as shown.



- (3) Install the blow off valve assembly to the suction pipe and reconnect the 6 φ vacuum hose as shown.



Starting the engine

- (1) Inspect the installation. Reconnect the negative terminal of the battery and start the engine.
- (2) Check and make sure that there no air leaks, clearance problems or irregular sound.
- (3) Lightly rev up the engine couple times to check if the blow off valve is operating.

Adjustment after installation

If irregular idle or engine stall occurs, loosen the M6 lock nut and turn the adjustment screw to **HARD** until the problem is eliminated.

After the adjustment, tighten the lock nut to secure the setting.

- ※ The adjustment is preset to the softest position form factory. Do not turn it further out that this position.
- ※ Make sure to loosen the lock nut before making adjustment. Turning the adjusting screw without loosening the lock nut will strip out the top housing.
- ※ When the adjustment screw is turned in, the stock of the valve decreases. Screwing it in too far will affect the proper operation of the valve.

When venting the outlet to the atmosphere, depending on the application, the airflow meter voltage can drop enough to stall the vehicle when the blow off valve is discharged.

If adjustment of the top screw cannot prevent the engine stall, install e-Manage system and use the Anti Engine Stall feature or reroute the discharge outlet back into the intake system after the airflow meter.



Warning

If the engine stalls while operating the vehicle, the steering and the Brakes will not operate properly and can be very dangerous.

How to change the Attachment

The attachment on the GReddy Type RS is interchangeable with discharge funnel or hose attachment.

To remove the attachment, turn it counter clock wise, and to install turn it clock wise.

When changing the attachment, place the O-ring to the attachment being installed and tighten until the attachment flange meets the blow of body.

※ Apply silicone grease before reinstalling the O-ring.

※ O-ring will not require excessive force to seal properly, so please be careful not to over tighten the attachment.

